

MODEL	SYSTEM	SUB SYSTEM	测试功能
01. ATOS 98-03	01. ENGINE L4-SOHC	01. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD EOBD	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD MEX	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD IMM	1、Fault Code 2、Data Stream 3、Actuations
		05. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		06. UNLEAD (SANTRO)	1、Fault Code 2、Data Stream 3、Actuations
		07LEAD (STANTRO)	1、Fault Code 2、Data Stream 3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	03. SAT		1、Fault Code 2、Data Stream 3、Actuations
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	05. SRS-AIRBAG		1、Fault Code 2、Data Stream
02. GETZ 03	01. ENGINE (GASOLINE)	01. UNLEAD GEN	1、Fault Code 2、Data Stream
		02. LEAD ALL	1、Fault Code 2、Data Stream
		03. UNLEAD EOBD	1、Fault Code 2、Data Stream
	02. ENGINE-DIESEL		1、Fault Code 2、Data Stream

	03. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	05. SRS AIRBAG		1、Fault Code 2、Data Stream
03. ACCENT 03	01. ENGINE (GASOLINE)	01. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		02. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD EOBD	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE-DIESEL		1、Fault Code 2、Data Stream 3、Actuations
	03. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	05. SRS-AIRBAG	01. SRE-LC/HMC	1、Fault Code 2、Data Stream
02. SRE-SMART (DUAL STAGE)		1、Fault Code 2、Data Stream	
04. ACCENT 00-02	01. ENGINE L4-SOHC	01. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations

		02. UNLEAD GEN	1、Fault Code	2、Data Stream	3、Actuations
		03. UNLEAD EOBD	1、Fault Code	2、Data Stream	3、Actuations
		04. UNLEAD OBD-II	1、Fault Code	2、Data Stream	3、Actuations
	02. ENGINE L4-DOHC	01. LEAD ALL	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD GEN	1、Fault Code	2、Data Stream	3、Actuations
		03. UNLEAD EOBD	1、Fault Code	2、Data Stream	3、Actuations
		04. UNLEAD OBD-II	1、Fault Code	2、Data Stream	3、Actuations
		05. UNLEAD (VIVA)	1、Fault Code	2、Data Stream	3、Actuations
	03. ENGINE-DIESEL		1、Fault Code	2、Data Stream	3、Actuations
	04. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
	05. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations 4、Deflation
	06. SRS-AIRBAG		1、Fault Code	2、Data Stream	
	07. IMMOBILIZER		1、Fault Code	2、Data Stream	3、Actuations
05. ACCENT 95-99	01. ENGINE L4-SOHC	01. UNLEAD 1.3 95-97MY GEN	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 1.3 95-97MY IMM	1、Fault Code	2、Data Stream	3、Actuations

	03. UNLEAD 1. 3L 98MY GEN	1、Fault Code 2、Data Stream 3、Actuations
	04. UNLEAD 1. 3L 98MY IMM	1、Fault Code 2、Data Stream 3、Actuations
	05. UNLEAD 1. 5L 95MY	1、Fault Code 2、Data Stream 3、Actuations
	06. UNLEAD 1. 5L 95MY	1、Fault Code 2、Data Stream 3、Actuations
	07 UNLEAD 1. 5L IMM	1、Fault Code 2、Data Stream 3、Actuations
	08. UNLEAD 1. 5 95-97MY KOR	1、Fault Code 2、Data Stream 3、Actuations
	09. UNLEAD 1. 5L 98MY KOR	1、Fault Code 2、Data Stream 3、Actuations
	10. LEAD 1. 5L 95MY	1、Fault Code 2、Data Stream 3、Actuations
	11. LEAD 1. 5L 96-99MY	1、Fault Code 2、Data Stream 3、Actuations
	12. UNLEAD 96-97MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	13. UNLEAD 98-99 OBD-II	1、Fault Code 2、Data Stream 3、Actuations
02. ENGINE L4-DOHC	01. UNLEAD 1. 5 95-97MY MAF	1、Fault Code 2、Data Stream 3、Actuations
	02. UNLEAD 1. 5L 97MY IMM	1、Fault Code 2、Data Stream 3、Actuations
	03. UNLEAD 1. 5 98-99MY IMM	1、Fault Code 2、Data Stream 3、Actuations
	04. UNLEAD 1. 5 97-98MY MAP	1、Fault Code 2、Data Stream 3、Actuations
	05. UNLEAD96-97MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
03. AUTOMATIC TRANSAXL		1、Fault Code 2、Data Stream 3、Actuations
04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
05. SRS-AIRBAG		1、Fault Code 2、Data Stream

06. EXCEL 90-94	01. ENGINE L4-SOHC		1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
07. SCOUPE 91-96	01. ENGINE L4-SOHC	01. UNLEAD 94-96MY GEN	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 92-94MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		03. UNLEAD 91-92MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		04. UNLEAD 94-96MY FED	1、Fault Code	2、Data Stream	3、Actuations
		05. UNLEAD 94-96MY CAL	1、Fault Code	2、Data Stream	3、Actuations
		06. LEAD 93-96MY ALL	1、Fault Code	2、Data Stream	3、Actuations
	02. ENGINE L4-DOHC TRUBO	01. UNLEAD 94-96MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 92-94MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		03. UNLEAD 92MY KOR	1、Fault Code	2、Data Stream	3、Actuations
	03. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
	04. CRUISE CONTROL		1、Fault Code	2、Data Stream	3、Actuations
	08. MATRIX 02-03	01. ENGINE (GASOLINE)	01. LEAD 1.6L ALL	1、Fault Code	2、Data Stream
02. UNLEAD 1.6L GEN			1、Fault Code	2、Data Stream	3、Actuations
03. UNLEAD 1.6L EOBD			1、Fault Code	2、Data Stream	3、Actuations

		04. LEAD 1.8L ALL	1、Fault Code	2、Data Stream	3、Actuations
		05. UNLEAD 1.8L GEN	1、Fault Code	2、Data Stream	3、Actuations
		06. UNLEAD 1.8L EOBD	1、Fault Code	2、Data Stream	3、Actuations
		02. ENGINE (DIESEL)	1、Fault Code	2、Data Stream	3、Actuations
		03. AUTOMATIC TRANSAXLE	1、Fault Code	2、Data Stream	3、Actuations
		04. ANTI-LOCK BRAKE SYSTEM	1、Fault Code	2、Data Stream	3、Actuations 4、Deflation
		05. SRS-AIRBAG	1、Fault Code	2、Data Stream	
06. TRACTION CONTROL SYSTEM	1、Fault Code	2、Data Stream	3、Actuations		
09. ELANTRA 01-03	01. ENGINE (GASOLINE)	01. LEAD 1.6L ALL	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 1.6L GEN	1、Fault Code	2、Data Stream	3、Actuations
		03. UNLEAD 1.6L EOBD	1、Fault Code	2、Data Stream	3、Actuations
		04. LEAD 1.8/2.0L ALL	1、Fault Code	2、Data Stream	3、Actuations
		05. UNLEAD 1.8/2.0L GEN	1、Fault Code	2、Data Stream	3、Actuations
		06. UNLEAD 1.8/2.0L EOBD	1、Fault Code	2、Data Stream	3、Actuations
		07. UNLEAD 2.0L(-SULEV)OBD	1、Fault Code	2、Data Stream	3、Actuations
		08. UNLEAD 2.0L(SULEV)OBD	1、Fault Code	2、Data Stream	3、Actuations

	02. ENGINE (DIESEL)		1、Fault Code	2、Data Stream	3、Actuations
	03. AUTOMATIC TRANSAXLE	01. 1.6L	1、Fault Code	2、Data Stream	3、Actuations
		02. 1.8/2.0L(MELCO TCM)	1、Fault Code	2、Data Stream	3、Actuations
		03. 1.8/2.0L(SIEMENS PCM)	1、Fault Code	2、Data Stream	3、Actuations
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations
			4、Deflation		
05. SRS-AIRBAG		1、Fault Code	2、Data Stream		
06. TRACTION CONTROL SYSTEM		1、Fault Code	2、Data Stream	3、Actuations	
10. ELANTRA 96-00	01. ENGINE L4-SOHC	01. UNLEAD 1.5L GEN	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 1.5L IMM	1、Fault Code	2、Data Stream	3、Actuations
		03. LEAD 1.5L ALL	1、Fault Code	2、Data Stream	3、Actuations
	02. ENGINE L4-DOHC	01. UNLEAD 1.5L 96MY KOR	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 1.5 97-98MY KOR	1、Fault Code	2、Data Stream	3、Actuations
		03. UNLEAD 1.6-2.0L GEN	1、Fault Code	2、Data Stream	3、Actuations
		04. UNLEAD 1.6-2.0L IMM	1、Fault Code	2、Data Stream	3、Actuations
		05. LEAD 1.6-2.0L ALL	1、Fault Code	2、Data Stream	3、Actuations

		06. UNLEAD 96MY OBD-II	1、Fault Code	2、Data Stream	3、Actuations
		07. UNLEAD 97MY OBD-II	1、Fault Code	2、Data Stream	3、Actuations
		08. UNLEAD98MY OBD-II	1、Fault Code	2、Data Stream	3、Actuations
		09. UNLEAD 99-00MY OBD-II	1、Fault Code	2、Data Stream	3、Actuations
	03. AUTOMATIC TRANSAXLE	01. - 99MY (A4BF1)	1、Fault Code	2、Data Stream	3、Actuations
		02. 2000MY (A4BF2)	1、Fault Code	2、Data Stream	3、Actuations
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations 4、Deflation
	05. SRS-AIRBAG		1、Fault Code	2、Data Stream	
	06. CRUISE CONTROL		1、Fault Code	2、Data Stream	3、Actuations
11. ELANTRA 92-95	01. ENGINE L4-SOHC		1、Fault Code	2、Data Stream	3、Actuations
	02. ENGINE L4-DOHC		1、Fault Code	2、Data Stream	3、Actuations
	03. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations

	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	05. SRS-AIRBAG		1、Fault Code 2、Data Stream
	06. CRUISE CONTROL	01. 92-93MY ALL 02. 94-95MY ALL	1、Fault Code 2、Data Stream 3、Actuations 1、Fault Code 2、Data Stream 3、Actuations
12. HD COUPE 02-03	01. ENGINE	01. LOAD 1.6L ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD 1.6L GEN	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD 1.6L EOBD	1、Fault Code 2、Data Stream 3、Actuations
		04. LEAD 2.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		05. UNLEAD 2.0(-CVVT)GEN	1、Fault Code 2、Data Stream 3、Actuations
		06. UNLEAD 2.0L(+CVVT)GEN	1、Fault Code 2、Data Stream 3、Actuations
		07. UNLEAD 2.0L(-CVVT)EOBD	1、Fault Code 2、Data Stream 3、Actuations
		08. UNLEAD 2.0L (+CVVT)EOBD	1、Fault Code 2、Data Stream 3、Actuations
		09. UNLEAD 2.0L OBD-II	1、Fault Code 2、Data Stream 3、Actuations
		10. LEAD 2.7L ALL	1、Fault Code 2、Data Stream 3、Actuations
		11. UNLEAD 2.7L GEN	1、Fault Code 2、Data Stream 3、Actuations
		12. UNLEAD 2.7L(TI) EOBD	1、Fault Code 2、Data Stream 3、Actuations
		13. UNLEAD 2.7L(ZR) EOBD	1、Fault Code 2、Data Stream 3、Actuations
		14. UNLEAD 2.7L(TI) OBD-II	1、Fault Code 2、Data Stream 3、Actuations
		15. UNLEAD2.7L(ZR)OBD-II	1、Fault Code 2、Data Stream 3、Actuations

	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
	03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations 4、Deflation
	04. SRS-AIRBAG		1、Fault Code	2、Data Stream	3、Actuations
13. HD COUPE 97-01	01. ENGINE L4-DOHC	01. UNLEAD 1.6/2.0L GEN	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 1.6/2.0L IMM	1、Fault Code	2、Data Stream	3、Actuations
		03. LEAD 1.6/2.0L ALL	1、Fault Code	2、Data Stream	3、Actuations
		0.4 EOBD 2001MY	1、Fault Code	2、Data Stream	3、Actuations
		05. UNLEAD 97MY OBD-II	1、Fault Code	2、Data Stream	3、Actuations
		06. UNLEAD 98MY OBD-II	1、Fault Code	2、Data Stream	3、Actuations
		07. UNLEAD 99-00 OBD-II	1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE	01. 97-99MY	1、Fault Code	2、Data Stream	3、Actuations
		02. 2000MY	1、Fault Code	2、Data Stream	3、Actuations
	03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations
	04. SRS-AIRBAG	01. 97-99MY	1、Fault Code	2、Data Stream	
		02. 2000MY	1、Fault Code	2、Data Stream	3、Actuations

	05. CRUISE CONTROL		1、Fault Code	2、Data Stream	3、Actuations	
14. SONATA 99-03	01. ENGINE L4-DOHC	01. UNLEAD GEN	1、Fault Code	2、Data Stream	3、Actuations	
		02. UNLEAD IMM	1、Fault Code	2、Data Stream	3、Actuations	
		03. LEAD ALL	1、Fault Code	2、Data Stream	3、Actuations	
		04. UNLEAD EOBD	1、Fault Code	2、Data Stream	3、Actuations	
		05. UNLEAD OBD-II	1、Fault Code	2、Data Stream	3、Actuations	
		06. LPG (~2002) ALL	1、Fault Code	2、Data Stream	3、Actuations	
		07. LPG (~2003-) ALL	1、Fault Code	2、Data Stream	3、Actuations	
	02. ENGINE V6-DOHC	01. UNLEAD GEN	1、Fault Code	2、Data Stream	3、Actuations	
		02. UNLEAD IMM	1、Fault Code	2、Data Stream	3、Actuations	
		03. LEAD ALL	1、Fault Code	2、Data Stream	3、Actuations	
		04. UNLEAD(TI 02S) EOBD	1、Fault Code	2、Data Stream	3、Actuations	
		05. UNLEAD(ZR 02S) EOBD	1、Fault Code	2、Data Stream	3、Actuations	
		06. UNLEAD(TI 02S) OBD-II	1、Fault Code	2、Data Stream	3、Actuations	
		07. UNLEAD(ZR 02S) OBD-II	1、Fault Code	2、Data Stream	3、Actuations	
	03. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations	
	04. ANTI-LOCK BRAKE SYS	01. CTC TYPE(99-02MY)		1、Fault Code	2、Data Stream	3、Actuations
		02. BOSCH TYPE(03MY-)		1、Fault Code	2、Data Stream	3、Actuations
				4、Deflation		
				4、Deflation		

	05. SRS-AIRBAG	01. 1999-2001MY	1、Fault Code 2、Data Stream
		02. F/LIFT	1、Fault Code 2、Data Stream
		02. BOSCH TYPE(03MY-)	1、Fault Code 2、Data Stream
		02. WITH IMMOBILIZER	1、Fault Code 2、Data Stream
15. SONATA 94-98	01. ENGINE L4-SOHC	01. UNLEAD 1.8L ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD 2.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		03. LEAD 1.8L ALL	1、Fault Code 2、Data Stream 3、Actuations
		04. LEAD 2.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		05. UNLEAD 97MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
		06. UNLEAD 98MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE L4-DOHC	01. UNLEAD 1.8L ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD 2.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		03. LEAD 2.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD 97MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
		05. UNLEAD 98MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	03. ENGINE V6-SOHC	01. UNLEAD 3.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. LEAD 3.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD 97MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD 98MY OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	04. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations

		05. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
		06. STS-AIRBAG		1、Fault Code 2、Data Stream
16. SONATA 89-93		01. ENGINE L4-SOHC		1、Fault Code 2、Data Stream 3、Actuations
		02. ENGINE L4-DOHC		1、Fault Code 2、Data Stream 3、Actuations
		03. ENGINE V6-SOHC		1、Fault Code 2、Data Stream 3、Actuations
		04. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
		05. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
		06. CRUISE CONTROL		1、Fault Code 2、Data Stream 3、Actuations
17. XG 99-03		01. ENGINE V6-DOHC	01. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
			02. LEAD(+ETS) ALL	1、Fault Code 2、Data Stream 3、Actuations

		03. UNLEAD GEN	1、Fault Code	2、Data Stream	3、Actuations
		04. UNLEAD (+ETS) GEN	1、Fault Code	2、Data Stream	3、Actuations
		05. UNLEAD (TI 02S) IMM	1、Fault Code	2、Data Stream	3、Actuations
		06. UNLEAD (ZR 02S) IMM	1、Fault Code	2、Data Stream	3、Actuations
		07. UNLEAD (+ETS) IMM	1、Fault Code	2、Data Stream	3、Actuations
		08. UNLEAD (+ETS) OBD-II	1、Fault Code	2、Data Stream	3、Actuations
	02. ATUOMATIC TRANSAXLE	01. 2.0/2.5L	1、Fault Code	2、Data Stream	3、Actuations
		02. 3.0/3.5L	1、Fault Code	2、Data Stream	3、Actuations
	03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations
	04. SRS-AISBAG	01. -2002MY	1、Fault Code	2、Data Stream	
02. F/LIFT		1、Fault Code	2、Data Stream		
18. MARCIA 96-98	01. ENGINE L4-DOHC		1、Fault Code	2、Data Stream	3、Actuations
	02. ENGINE V6-DOHC		1、Fault Code	2、Data Stream	3、Actuations
	03. ATUOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations

19. CENTENNIAL 00-03

		4、Deflation
05. SRS-AIRBAG		1、Fault Code 2、Data Stream
01. ENGINE	02. UNLEAD 3.0L(+ETS) ALL	1、Fault Code 2、Data Stream 3、Actuations
	03. UNLEAD 3.5L(+ETS) GEN	1、Fault Code 2、Data Stream 3、Actuations
	04. UNLEAD3.5L(+ETS) EOBD	1、Fault Code 2、Data Stream 3、Actuations
	05. LEAD 3.5L(+ETS) ALL	1、Fault Code 2、Data Stream 3、Actuations
	06. UNLEAD 4.5L GDI ALL	1、Fault Code 2、Data Stream 3、Actuations
	07. UNLEAD 4.5L(+ETS) OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	08. UNLEAD 4.5L MPI GEN	1、Fault Code 2、Data Stream 3、Actuations
	09. UNLEAD 4.5L MPI EOBD	1、Fault Code 2、Data Stream 3、Actuations
	10. UNLEAD 4.5L MPI OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	11. LEAD 4.5L MPI ALL	1、Fault Code 2、Data Stream 3、Actuations
	02. AUTOMATIC TRANSAXLE	01. 3.0/3.5L
02. 4.5L		1、Fault Code 2、Data Stream 3、Actuations
03. VDC	01. MELCO TYPE	1、Fault Code 2、Data Stream 3、Actuations
	02. CTC TYPE(2002.09~)	1、Fault Code 2、Data Stream 3、Actuations
04. ANTI-LOCK BRAKE SYSTEM	01. ITT TYPE	1、Fault Code 2、Data Stream 3、Actuations
		4、Deflation

		02. CTC TYPE(2002.09~)	1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	05. SRS-AIRBAG	01. - 2001MY (SDM-GH)	1、Fault Code 2、Data Stream
		02. 2002MY-(SRE-SMART)	1、Fault Code 2、Data Stream
		02. CTC TYPE(2002.09~)	1、Fault Code 2、Data Stream
20. GRANDEUR 94-98	01. ENGINE L4-SOHC		1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE L4-DOHC		1、Fault Code 2、Data Stream 3、Actuations
	03. ENGINE V6-SOHD		1、Fault Code 2、Data Stream 3、Actuations
	04. ENGINE V6-DOHC		1、Fault Code 2、Data Stream 3、Actuations
	05. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	06. ANIT-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations
	07. SRS-AIRBAG		1、Fault Code 2、Data Stream
21. GRANDEUR 83-93	01. ENGINE L4-SOHC		1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE V6-SOHC		1、Fault Code 2、Data Stream 3、Actuations
	03. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations

22. H-100 94-01	01. ENGINE L4-SOHC	01. UNLEAD 94-96MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 97-2000MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		03. LEAD 94-96MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		04. LEAD 97-2000MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		05. LEAD97-98MY ALL	1、Fault Code	2、Data Stream	3、Actuations
		06. DIESEL	1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
23. H100-TRUCK 97-03	01. ENGINE L4-SOHC	01. GASOLINE	1、Fault Code	2、Data Stream	3、Actuations
		02. DIESEL	1、Fault Code	2、Data Stream	3、Actuations
		03. FBM	1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
24. H-1 98-03	01. ENGINE-GASOLINE: 2000MY~	01. UNLEAD 2. 4L GEN	1、Fault Code	2、Data Stream	3、Actuations
		02. UNLEAD 2. 4L EOBD	1、Fault Code	2、Data Stream	3、Actuations
		03. LEAD 2. 4L ALL	1、Fault Code	2、Data Stream	3、Actuations
	02. ENGINE-GOSOLINE~2000MY		1、Fault Code	2、Data Stream	3、Actuations
	03. ENGINE DIESEL	01. T/CHARGER (COVEC-F)	1、Fault Code	2、Data Stream	3、Actuations
		02. T/C INTERCOOLER (COVEC)	1、Fault Code	2、Data Stream	3、Actuations
		03. CRDI (A-ENG)	1、Fault Code	2、Data Stream	3、Actuations
	04. ENGINE FBM		1、Fault Code	2、Data Stream	3、Actuations
	05. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
	06. ANTI LOCK BRAKE SYSTEM	01. 2WD	1、Fault Code	2、Data Stream	3、Actuations

			4、Deflation
		02. 4WD	1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
		07. SRS AIRBAG	1、Fault Code 2、Data Stream
25. H-1TRUCK 01-03	01. ENGINE DIESEL		1、Fault Code 2、Data Stream 3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	04. SRS AIRBAG		1、Fault Code 2、Data Stream
26. SANTAFE 01-03	01. ENGINE 2. 0/2. 4L (GASOLINE)	01. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD 2. 0L EOBD	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD 2. 4L EOBD	1、Fault Code 2、Data Stream 3、Actuations
		05. UNLEAD OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE 2. 7L (GASOLINE)	01. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD (TI O2S) EOBD	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD (ZR O2S) EOBD	1、Fault Code 2、Data Stream 3、Actuations
		05. UNLEAD (TI O2S) OBD-II	1、Fault Code 2、Data Stream 3、Actuations
		06. UNLEAD (ZR O2S) OBD-II	1、Fault Code 2、Data Stream 3、Actuations
	03. ENGINE (DIESEL)	01. WITHOUT VGT	1、Fault Code 2、Data Stream 3、Actuations

		02. WITH VGT	1、Fault Code 2、Data Stream 3、Actuations
	04. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	05. ANTI-LOCK BRAKE SYSTEM	01. 2WD	1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
		02. 4WD	1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	06. SRS-AIRBAG		1、Fault Code 2、Data Stream
27. TRAJET XG 01-03	01. ENGINE 2.0L (GASOLINE)	01. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD EOBD	1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE 2.7L (GASOLINE)	01. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD (TI O2S) EOBD	1、Fault Code 2、Data Stream 3、Actuations
		04. UNLEAD (ZR O2S) EOBD	1、Fault Code 2、Data Stream 3、Actuations
	03. ENGINE (DIESEL)	01. WITHOUT VGT	1、Fault Code 2、Data Stream 3、Actuations
		02. WITH VGT	1、Fault Code 2、Data Stream 3、Actuations
	04. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Actuations
	05. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Actuations 4、Deflation
	06. SRS-AIRBAG		1、Fault Code 2、Data Stream
	28. TAXI 94-01	01. ENGINE L4-SOHC FBM	

		02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations
29. TERRACAN	01-03	01. ENGINE	01. 2.5L DIESEL(TCI)	1、Fault Code	2、Data Stream	3、Actuations
			02. 2.9L DIESEL(C/RAIL)	1、Fault Code	2、Data Stream	3、Actuations
			03. UNLEAD 3.5L GEN	1、Fault Code	2、Data Stream	3、Actuations
			04. UNLEAD 3.5L EOBD	1、Fault Code	2、Data Stream	3、Actuations
			05. UNLEAD 3.5L OBD-II	1、Fault Code	2、Data Stream	3、Actuations
			06. LEAD 3.5L ALL	1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations	
03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations	4、Deflation	
04. SRS-AIRBAG		1、Fault Code	2、Data Stream			
30. GALLOPER-II		01. ENGINE V6-SOHC	01. UNLEAD 3.0L GEN	1、Fault Code	2、Data Stream	3、Actuations
			02. UNLEAD 3.0L IMM/ME	1、Fault Code	2、Data Stream	3、Actuations
			03. LEAD 3.0L GEN	1、Fault Code	2、Data Stream	3、Actuations
			04. LEAD 3.0L IMM	1、Fault Code	2、Data Stream	3、Actuations
			05. DIESEL (COVEC-F)	1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations	
	03. ANTI-LOCK BRAKE SYSTEM	01. ~2000MY	1、Fault Code	2、Data Stream	3、Actuations	
		02. 2001MY BOSCH	1、Fault Code	2、Data Stream	3、Actuations	4、Deflation
	04. SRS-AIRBAG		1、Fault Code	2、Data Stream		

31. SANTAMO	01. ENGINE L4-SOHC	01. UNLEAD 2. 0L ALL	1、Fault Code	2、Data Stream	3、Actuations	
		02. LEAD 2. 0L ALL	1、Fault Code	2、Data Stream	3、Actuations	
	02. ENGINE L4-DOHC	01. UNLEAD 2. 0L ALL	1、Fault Code	2、Data Stream	3、Actuations	
		02. LEAD 2. 0L ALL	1、Fault Code	2、Data Stream	3、Actuations	
	03. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations	
	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations	
05. SRS-AIRBAG		4、Deflation				
32. ATOS F/LIFT 2006	01. ENGINE L4-SOHC	01. UNLEAD 1. 0 GEN	1、Fault Code	2、Data Stream	3、Actuations	
		02. UNLEAD 1. 1 GEN	1、Fault Code	2、Data Stream	3、Actuations	
		03. UNLEAD EOBD	1、Fault Code	2、Data Stream	3、Actuations	
		04. UNLEAD MEX	1、Fault Code	2、Data Stream	3、Actuations	
		05. LEAD 1. 0ALL	1、Fault Code	2、Data Stream	3、Actuations	
		06. LEAD 1. 1ALL	1、Fault Code	2、Data Stream	3、Actuations	
	02. AUTOMATIC TRANSAXLE		1、Fault Code	2、Data Stream	3、Actuations	
	03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations	
	33. ATOS F/LIFT 2004-2005	01. ENGINE L4-SOHC	01. UNLEAD 1. 0 GEN	1、Fault Code	2、Data Stream	3、Actuations
			02. UNLEAD 1. 1 GEN	1、Fault Code	2、Data Stream	3、Actuations
			03. UNLEAD EOBD	1、Fault Code	2、Data Stream	3、Actuations
04. UNLEAD MEX			1、Fault Code	2、Data Stream	3、Actuations	

		05. LEAD 1.0ALL	1、Fault Code 2、Data Stream 3、Actuations
		06. LEAD 1.1ALL	1、Fault Code 2、Data Stream 3、Actuations
	02. AUTOMATIC TRANSAXLE	1、Fault Code 2、Data Stream 3、Actuations	
	04. ANTI-LOCK BRAKE SYSTEM	1、Fault Code 2、Data Stream 3、Actuations	
34. GETZ 2006	01. ENGINE (GASOLINE)	01. UNLEAD GEN	1、Fault Code 2、Data Stream 3、Actuations
		02. LEAD ALL	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD EOBD	1、Fault Code 2、Data Stream 3、Actuations
	02. ENGINE-DIESEL	1、Fault Code 2、Data Stream 3、Actuations	
	03. AUTOMATIC TRANSAXLE	1、Fault Code 2、Data Stream 3、Actuations	
35. ELANTRA 04-06	01. ENGINE (GASOLINE)	01. LEAD 1.6L ALL	1、Fault Code 2、Data Stream 3、Actuations
		02. UNLEAD 1.6L GEN	1、Fault Code 2、Data Stream 3、Actuations
		03. UNLEAD 1.6L EOBD	1、Fault Code 2、Data Stream 3、Actuations
		04. LEAD 1.8/2.0L ALL	1、Fault Code 2、Data Stream 3、Actuations
		05. UNLEAD 1.8/2.0L (-CVT) GEN	1、Fault Code 2、Data Stream 3、Actuations
		06. UNLEAD 1.8/2.0L (+CVT) GEN	1、Fault Code 2、Data Stream 3、Actuations
		07. UNLEAD 1.8/2.0L (CVT)EOBD	1、Fault Code 2、Data Stream 3、Actuations
		08. UNLEAD 2.0L (CVT)EOBD-II	1、Fault Code 2、Data Stream 3、Actuations

36. SONATA 05-06	02. ENGINE (DIESEL)	01. EURO-3 VGT (KWP)	1、Fault Code	2、Data Stream	3、Actuations	
		02. EURO-4 VGT (CAN)	1、Fault Code	2、Data Stream	3、Actuations	
	03. AUTOMATIC TRANSAXLE	01. 1.6L	1、Fault Code	2、Data Stream	3、Actuations	
	01. ENGINE (GASOLINE)	04. ANTI-LOCK BRAKE SYSTEM		1、Fault Code	2、Data Stream	3、Actuations
			1. UNLEAD 2.0/2.4L -ETS GEN	1、Fault Code	2、Data Stream	3、Actuations
		2. UNLEAD 2.0/2.4L-ETS EOBD	1、Fault Code	2、Data Stream	3、Actuations	
		3. LEAD 2.0/2.4L -ETS ALL	1、Fault Code	2、Data Stream	3、Actuations	
		4. UNLEAD 2.0/2.4L +ETS GEN	1、Fault Code	2、Data Stream	3、Actuations	
		5. UNLEAD 2.0/2.4L +ETS EOBD	1、Fault Code	2、Data Stream	3、Actuations	
		6. LEAD 2.0/2.4L +ETS ALL	1、Fault Code	2、Data Stream	3、Actuations	
7. UNLEAD 3.3L GEN		1、Fault Code	2、Data Stream	3、Actuations		
8. UNLEAD 3.3L EOBD	1、Fault Code	2、Data Stream	3、Actuations			

		9. LEAD 3.3L	ALL	1、Fault Code	2、Data Stream	3、Actuations
	02. AUTOMATIC TRANSAXLE			1、Fault Code	2、Data Stream	3、Actuations
37. H100-TRUCK 04-06	01. ENGINE	01. GASOLINE		1、Fault Code	2、Data Stream	3、Actuations

Update software: 2008/12

Hyundai testing coverage