

Mitsubishi Testable Coverage

Version: 20.00

Updated date: 18th March 2007

DIAMANTE	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
LANCER	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-blake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	AYC/ACD system	Read fault code	Clear fault code	Read data stream	Actuation	
MIRAGE	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
PAJERO	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	ABS	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-theft system	Read fault code	Clear fault code	Read data stream		
	Automatic navigation system	Read fault code	Clear fault code	Read data stream		
	HBB system	Read fault code	Clear fault code	Read data stream		
CHANLLENGER	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
GRANDIS	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
MINICA	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
EK WAGON	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
TOPPO	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		

	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
LEGNUM	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
TOWNBOX	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
DELICA	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
Aistsek	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
RVR	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
COLT	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
ENDEAVOR	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Tire pressure monitoring system	Read fault code	Clear fault code	Read data stream	Actuation	Special funtion
ECLIPSE	Engine system	Read fault code	Clear fault code	Read data stream	Actuation	
	Anti-lock brake system	Read fault code	Clear fault code	Read data stream	Actuation	
	Airbag system	Read fault code	Clear fault code	Read data stream		
	Automatic transmission	Read fault code	Clear fault code	Read data stream	Actuation	
	Air-condition system	Read fault code	Clear fault code	Read data stream	Actuation	
	CAMERA system	Read fault code	Clear fault code	Read data stream	Actuation	